

UPPER RECEIVER : MAT-9 or MAT-9K

DISASSEMBLY INSTRUCTIONS

**Important!!! Please ensure your rifle is unloaded prior to starting any work.
Place your ammunition away from the workspace.**

GETTING SUPPORT: PLEASE DO NOT RETURN TO THE DEALER FOR SUPPORT OR TECHNICAL QUESTIONS WITH REGARD TO MATADOR ARMS PRODUCTS: WE'RE HERE TO HELP YOU DIRECTLY!! Call 707-416-8847 OR 210-500-5766 for support, or email info@matadorarms.com

OVERVIEW : The MAT-9 is a self-contained roller delayed upper that works on mil-spec AR-15 and AR-9 lower receivers.

It should only be used on high quality metal AR lowers that are MIL-SPEC. Never use the MAT-9 on a lower receiver that is not on par with industry specifications.

DISASSEMBLY

1. Clear the area of live ammunition.
2. Press in the back assembly



3. Slide the T-block down at the same time
Use any tool IF necessary to push the t-block down



- Slide the Buffer Guide Rod System (BGRS) out of the rear of the receiver.



- Slide the Upper Bolt and Main Bolt out.



- Slide the charging handle to the rear of the slot and remove the handle. The Charging Handle Slide Block can then be removed from the front side of the upper receiver



- (You can change the side of the charging handle if desired to Left Side or Right Side)*

FAQ and Troubleshooting

1. What lower will this work with?

The MAT9 will run on any lower so long as the lower is a mil spec 9mm lower WITH the ejector.

2. My MAT9 is having failure to eject issues

Stovepipes are an ejector position issue. On 9mm AR's lowers the ejector is adjustable for this reason. A slight tweak in position will adjust the direction the casing is shot out the side. If its in the wrong position it will boot the round forward and

back into the chamber causing a stove pipe. We recommend lowering it to its lowest setting or rock it forward or backward

depending on were it sits now. Give it a test fire and see if that fixes the issue. Give us a call if you have any questions!

3. Will it run Suppressed?

Yes! It is a plug and play system no adjustments are necessary.

4. What type of Ammo should I use?

The MAT9 series upper will run any type of 9mm ammo.

5. How often should I lube and where should I lube the upper.

Applying lubrication to the rails every 250 rounds insures reliability.